
INSTALLATION INSTRUCTIONS

FOR REPLACEMENT UNCASED COILS FOR AIR HANDLERS:

RCSN: featuring Industry Standard R-410A

Refrigerant



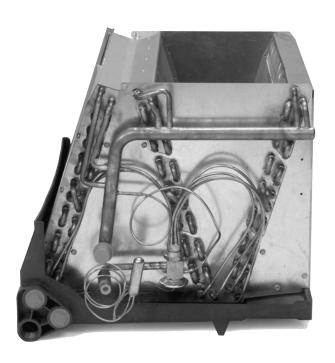

NOTE: Shown with Horizontal Drip Shield. (Requires RXHH- Horizontal Adapter Kit.)



RECOGNIZE THIS SYMBOL AS AN INDICATION OF IMPORTANT SAFETY INFORMATION!

AWARNING


These instructions are intended as an aid to qualified licensed service personnel for proper installation, adjustment and operation of this unit. Read these instructions thoroughly before attempting installation or operation. Failure to follow these instructions may result in improper installation, adjustment, service or maintenance possibly resulting in fire, electrical shock, property damage, personal injury or death.



DO NOT DESTROY THIS MANUAL

PLEASE READ CAREFULLY AND KEEP IN A SAFE PLACE FOR FUTURE REFERENCE BY A SERVICEMAN



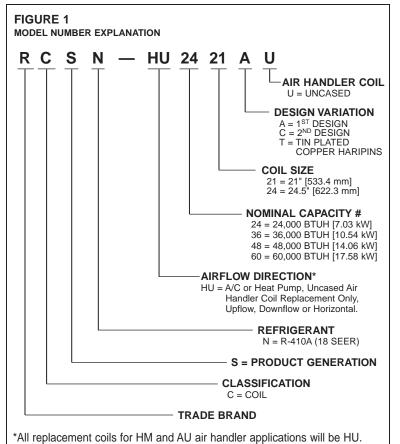

GENERAL

RCSN- is a <u>replacement only</u> uncased coil. RCSN-replacement coils are used only in (-)HPN R-410A air handlers.

For horizontal applications, a horizontal drip shield must be installed to catch excess condensate drainage. RCSN replacement coil is shipped without a horizontal drip shield. For a horizontal adapter kit, refer to Table 1 for correct kit matchups.

AWARNING

The drain pan that comes with the RCSN-Uncased Air Handler Coil is not built with a high-heat resistant material. Do NOT use these coils with gas and oil fossil fuel furnaces, or any other high-heat device. Failure to obey this warning could result in serious equipment damage, personal injury or death.

TABLE 1
R-410A UNCASED COILS: RCSN- ACCESSORY INFORMATION

Replacement R-410A Uncased Coil Model	Original R-410A Air Handler Model RHPN-HM	Horizontal Adapter Kit Model Number
RCSN-HU3624CU/TU	3624	RXHH-A05
RCSN-HU4824CU/TU	4824	RXHH-A05
RCSN-HU6024CU/TU	6024	RXHH-A05

2 CM 1212